impey
THE WETROOM SPECIALIST

Installation Guide
Waterguard Membrane for Walls
WG10W

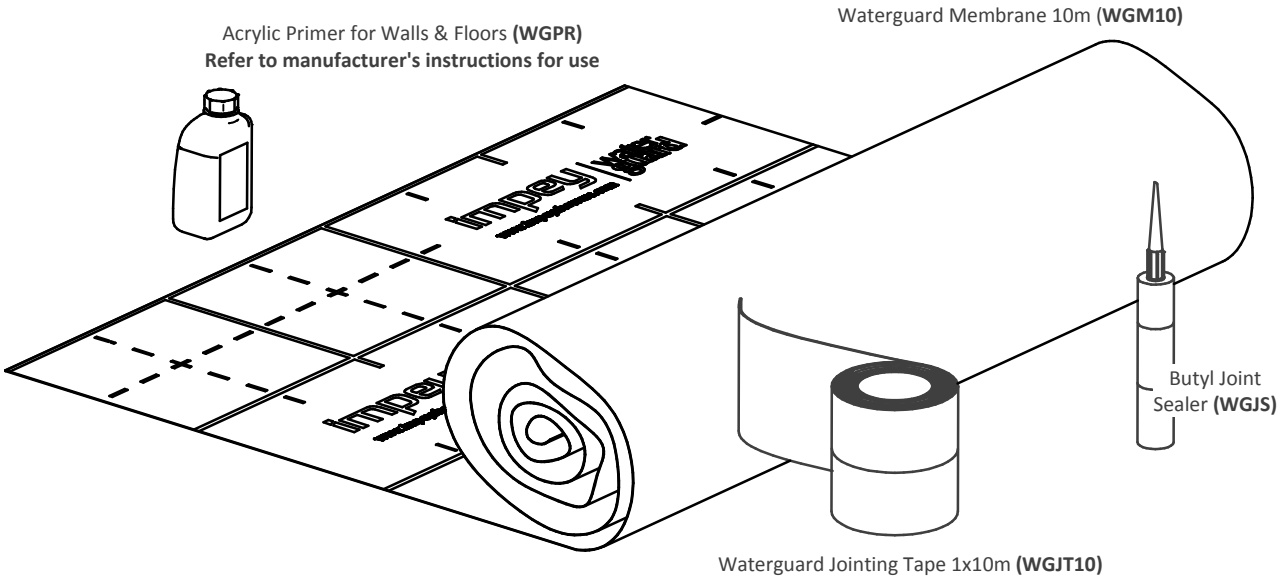

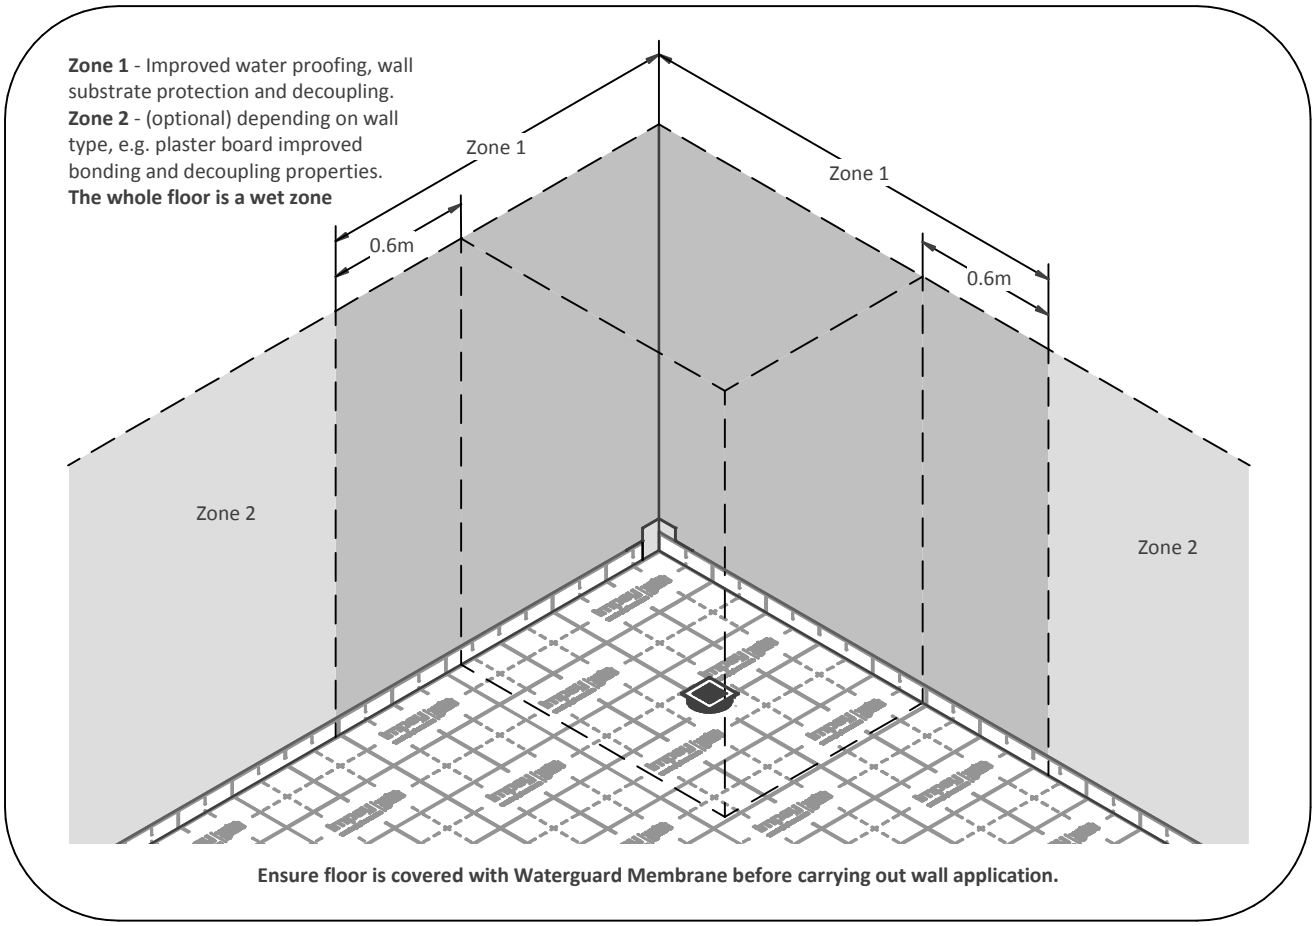

Ensure floor is covered with Waterguard Membrane before carrying out wall application.

impey

THE WETROOM SPECIALIST

Installation Guide

Waterguard Membrane for Walls

Ensure the surface is clean, dry, free from dust, grease, oil etc., all indentations should be filled and any protrusions struck off. Oily or greasy surfaces should be cleaned with a suitable cleaner, thoroughly rinsed then allowed to dry.

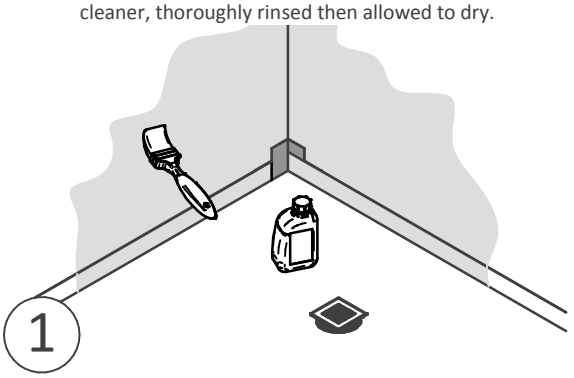

Apply the primer to the selected walls.

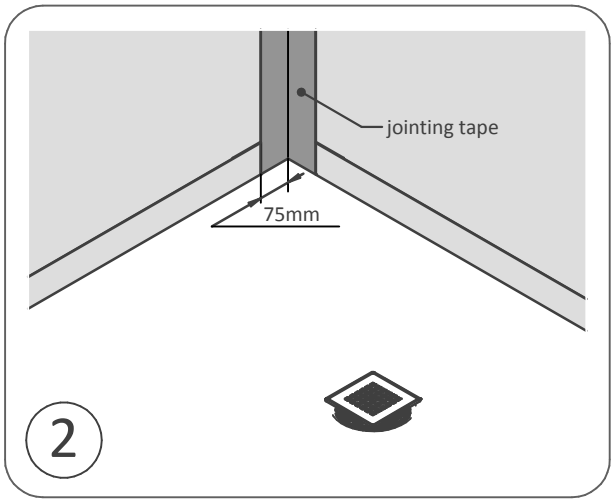

When primer is fully dry apply the 150mm jointing tape to all wall to wall interfaces as shown.

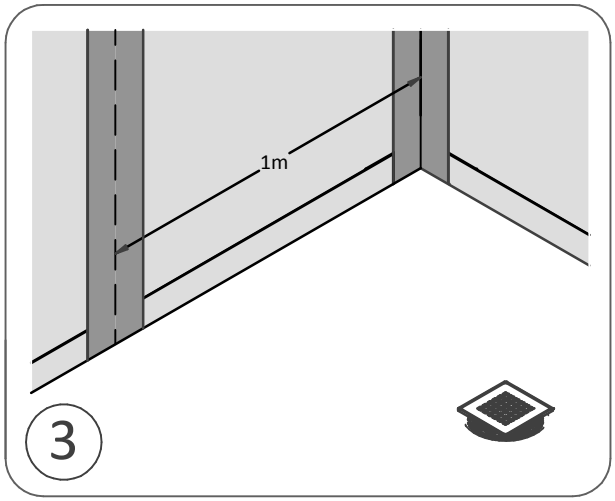

Measure 1m (the width of the sheet of Waterguard Membrane) and mark a guide line for the jointing tape. Removing the release paper set the tape down so that the guide line runs along the centre of the tape.

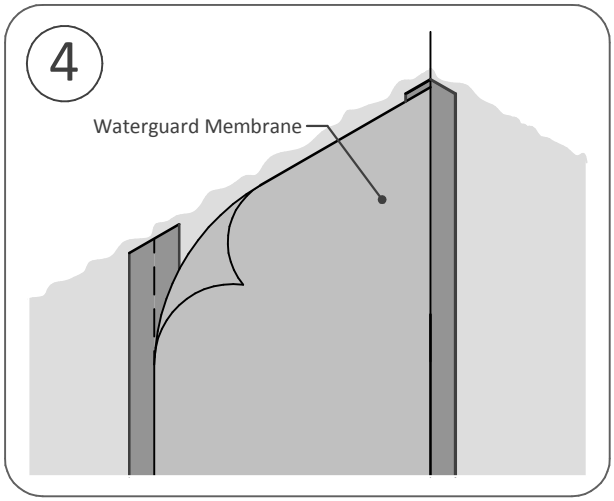

Measure and cut required length of Waterguard Membrane. Remove the release paper and carefully set into position - pressing firmly onto the jointing tape. Repeat steps 3 and 4 untill the wall is covered.

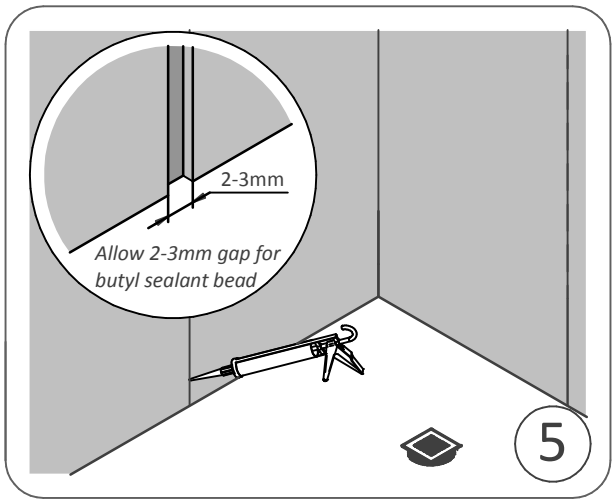

Using an applicator gun, apply sealant at all wall to wall and wall to floor interfaces, pipe entries, etc. **Allow the sealant to cure before applying tile adhesive.**

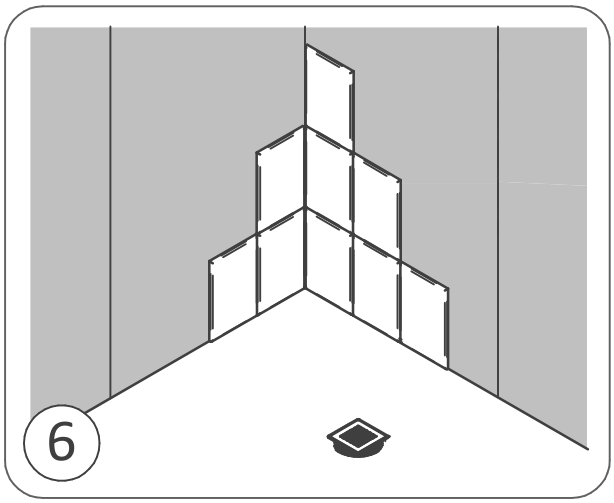

Tile the walls in a normal manner.